

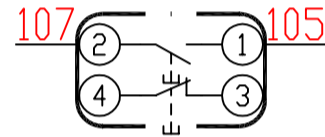
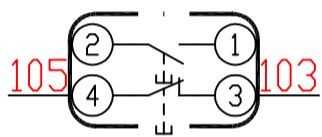
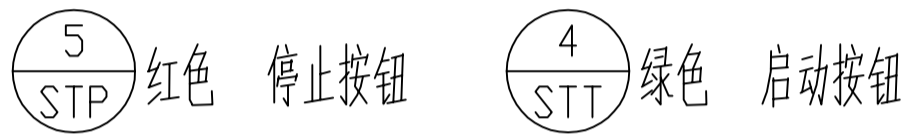


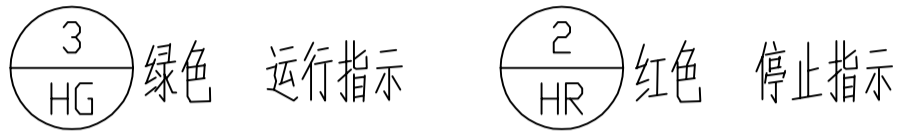


面板背视



转换开关接点

|     | 就地 | 远方 |
|-----|----|----|
| 1-2 |    | ×  |
| 3-4 | ×  |    |
| 5-6 |    | ×  |
| 7-8 | ×  |    |

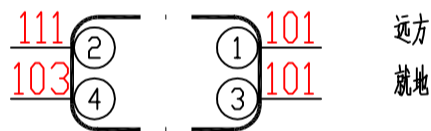

| I  |     |   |
|----|-----|---|
| 1  | 101 |   |
| 2  |     |   |
| 3  | 105 |   |
| 4  |     |   |
| 5  | 107 |   |
| 6  | 111 |   |
| 7  | 113 |   |
| 8  | 115 |   |
| 9  | 117 |   |
| 10 | N   |   |
| 11 |     |   |
| 12 |     | N |
| 13 |     |   |
| 14 |     |   |
| 15 |     |   |

柜内如多回路，需在线号前加“1-;2-”

N 至零排，零线也需区分，线号前加“1-N,2-N”

|    |  |         |  |           |  |
|----|--|---------|--|-----------|--|
|    |  |         |  | C2 按钮箱接线图 |  |
| 设计 |  | 日期      |  |           |  |
| 审核 |  | 日期      |  |           |  |
| 日期 |  | 2025.01 |  | 图号        |  |

由 Autodesk 教育版产品制作